

AK RANGER

* Make sure the handset is
in idle mode.

ATTN

SAMPLE LED INDICATIONS

SAMPLE LCD INDICATIONS

4.5 Clock/Calendar Setting


 
* The clock/calendar can be set from the Attendant
Key Telephone (only Tel. Port No. 10 or 11).

NOTE: If no key entry is made in 10 seconds, the
clock setting mode will be automatically cancelled.

EXAMPLE: Monday, February, 9, 1988,
10:15 A.M

- (1) Depress FNC key.
- (2) Dial 9 and #.
 - Move the cursor to the desired position by using # or * button.
(Cursor is indicated by blinking character.)
- (3) Hour Setting : Dial 1, 0
- (4) Minute Setting : Dial 1, 5
- (5) AM/PM Setting : Depress RECALL key.
- (6) Depress HOLD key for setting the Calendar.
- (7) Month Setting : Dial 0, 2.
- (8) Day Setting : Dial 0, 9.

FNC LED lights.

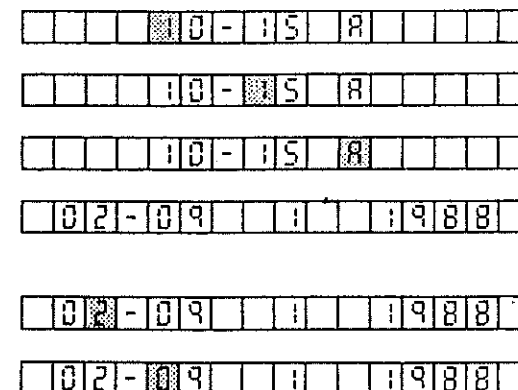

SAMPLE LED INDICATIONS

SAMPLE LCD INDICATIONS

- (9) Day of Week Setting : Dial 1
(See Note)
- (10) Year Setting : Dial 1,9,8,8
- (11) Depress FNC key.

NOTE: The day of the week is shown by number as follows.

- | | |
|---------|---------|
| 0 : SUN | 4 : THU |
| 1 : MON | 5 : FRI |
| 2 : TUE | 6 : SAT |
| 3 : WED | |

FNC LED goes off.

